 



16 スプリット・モード

1 フル




2 V

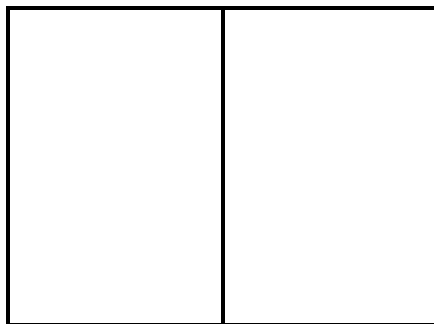


2 H




4

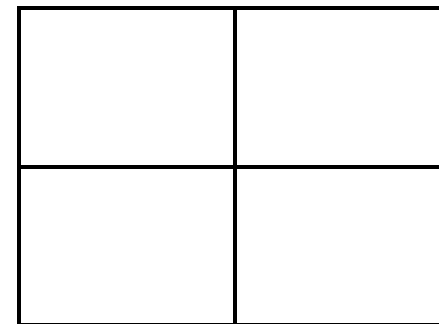


6

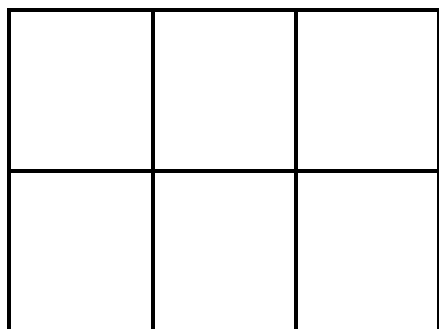


7

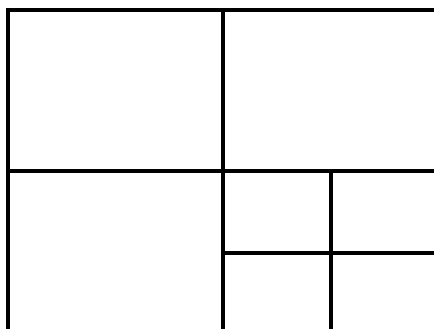


8

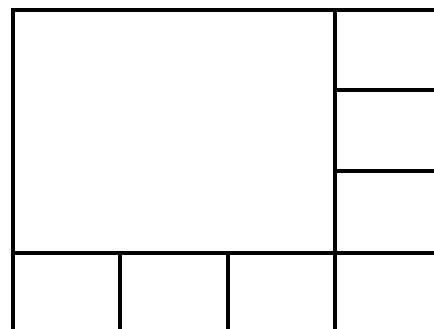


9

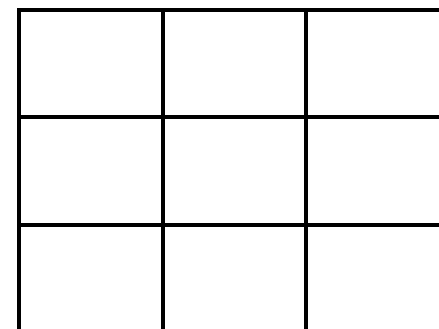


10

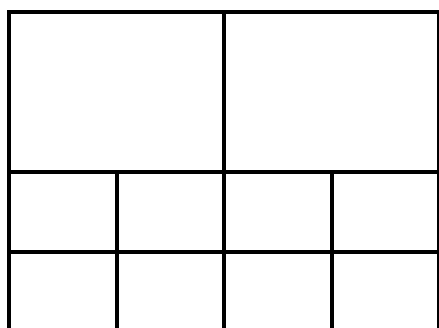

13

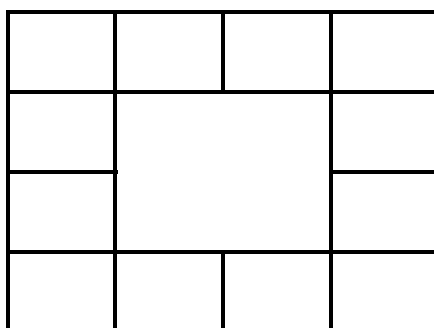

16

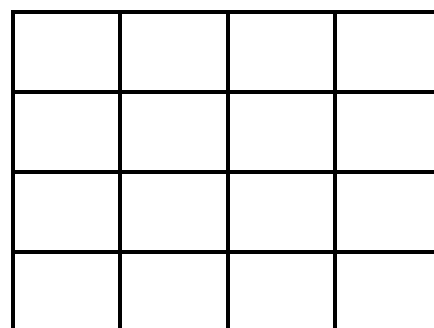

型番により、分割モードは異なります。